



ISO 9001:1994
2004 JSAQ 047



DIGITAL TEMPERATURE CONTROLLER **TTM-000**



*Most Superior Controller with Advanced Multiple Functions!
Low Price, Easy Operation & Selectable Input!!*

DIGITAL TEMPERATURE CONTROLLER

TTM-000 SERIES TTM-002/004/005/006/007/009

Upgraded Digital Temperature Controller with Various Functions, Easy-to-Use & Multiple Inputs

■ Features

● Self-Tuning PID

Most appropriate PID constant is automatically reckoned up for control objects. PID constant is calculated when making alteration of setting value, or it is corrected when occurring disturbance/hunting etc.

● Blind Function

At the request, desirable parameter screen is only displayed and set up.

● Simplified Timer

ON/OFF setting control is available after some certain interval. Function of ON/OFF alarm output is independently usable.

● Priority Display

Demanding parameter screens are monitored and set up under operational mode screen.(max. 9 screens)

● Multiple Inputs

Thermocouple/R.T.D.(Pt 100 & JPt 100) are selectable by front key.

● Standardization of Conformity

UL, CUL, CE & IP 66 approved.


● Compact Size

It is a compact size. The depth is only 77mm! (95mm for TTM-002)

● Manual Control (Balanceless & Bumpless)

Manual output function is applicable for versatile applications of instrumentation systems.

■ Front Panel

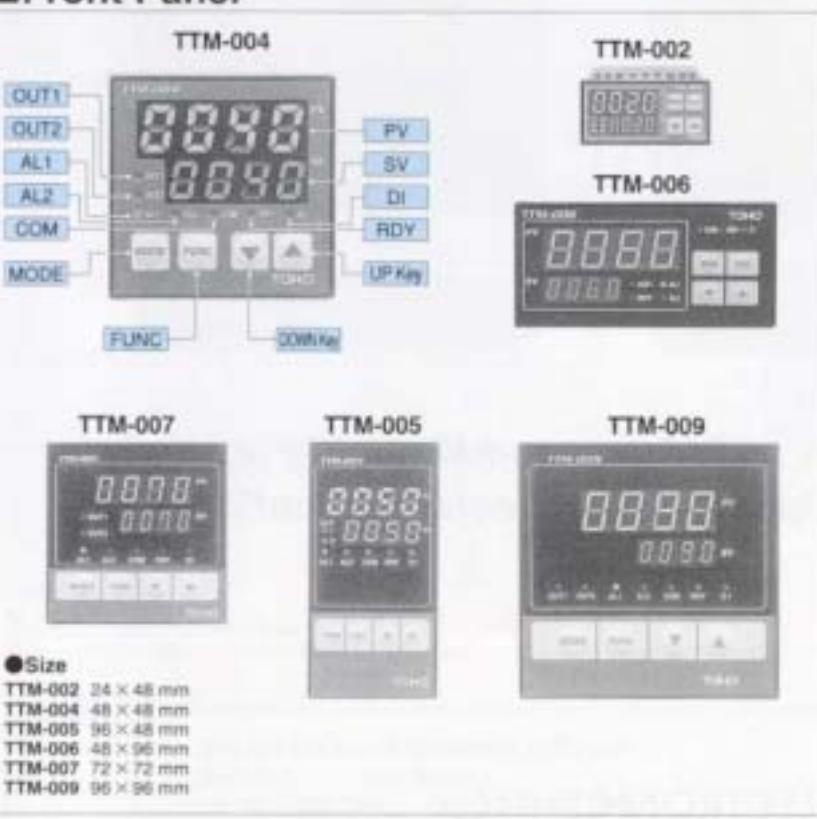

● Communication Function (RS-485)

The communication distance is extended up to 500 meters, and maximum 31 units of computers can be connected at a time. Centralized supervision is available for collection of the whole data and alteration of setting values at remote location.

● Digital PV Filter

For abrupt alteration of input value, filter effect is operational on software.

● PID Over-Shoot Protection

It is functional to inhibit PID Over-Shoot.

● DI (Digital Input) Functions

The following functions are selective.

- ① SV/SV2
- ② RUN/READY
- ③ Automatic (RUN)/Manual
- ④ Normal/Reverse Action
- ⑤ Nomal (SV2)/Reverse Action (SV)
- ⑥ AT (Auto-Tuning) Start
- ⑦ Timer, Start/Reset

● Heating/Cooling Control



PID control is available on cooling side.

● Others

- ① CT Input (Input Monitor usable)
- ② Shift setting of OFF position during ON/OFF control, for both output 1 & 2.

AL1	Output monitor for event output 1
AL2	Output monitor for event output 2
OUT1	Output monitor for output 1
OUT2	Output monitor for output 2
RDY	Lighting while being operation ready
COM	Lighting while operating communication (option)
MODE	Mode key for shifting display
DI	Lighting while operating DI (option)
FUNC	Function key for digit shift, AT(Auto-Tuning), RUN/READY, Timer Start/Reset
PV	Indication of process value & character display for alarm, PID etc.
SV	Indication of setting value, manipulation value & residual time of timer.
△	Up/Down key for alteration of setting value Pressing 1 ~ 10 sec : 1 digit/100ms 10 ~ 20 sec : 10 digits/100ms over 20 sec : 100 digits/100ms
▽	

■ Panel Installation

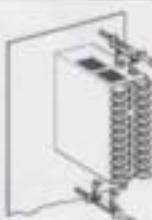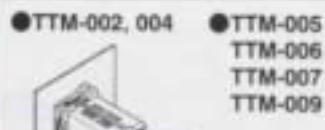

For this panel installation, please be careful sufficiently to avoid any of damage.


■Standard Specifications

Input Switchable	Thermocouple	K, J, T, R, N, S, B (JIS1602~1995)
	R.T.D.	Pt100, JPt100 (Lead resistance : 10Ω or less)
	Current · Voltage	Current 4~20mA DC (Input resistance 250Ω), Voltage 0~5V DC/1~5V DC (Input resistance 500kΩ over)
Indication	PV (Character)	4 digits, 7 segments Green 10mm height (7.6mm height for TTM-002, 12mm height for TTM-006/009)
	SV (Setting Value)	4 digits, 7 segments Red 8mm height (5.25mm height for TTM-002)
	Various Function Indication	LED : Red (AL1, AL2, OUT1, OUT2 or RDY), LED : Green (COM, DI), COM for TTM-002 is 1st decimal digit of display
Control Method	PID Auto-Tuning	Proportional band (P1) 0.1 to 200.0% of setting limiter span
	PID Self-Tuning	Proportional band (P2) at Output 2 0.10 to 10.00 times (Times per P)
		Reset time (Integral I) 1 to 3600 sec (0 : OFF)
		Rate time (Deviation) (D) 1 to 3600 sec (0 : OFF)
		Cycle time (T1, T2) 1 to 120 sec
	Dead band (DB)	-100.0 to +100.0 or -100 to +100 (°C)
	ON/OFF	Control sensitivity (C1, C2) 0 to 999 or 0.0 to 999.9 (°C)
Control Output	OFF Point of Output 1 & 2	Position of setting -199 to 999 or -199.9 to 999.9 (°C)
	Relay Contact	250VA C, 3A (Load resistance) 1a contact (On heating/cooling operation, output 2 is 250V AC, 2.4A load resistance, 1a contact)
	SSR Drive Voltage	0 to 12V DC (Load resistance : 600Ω or more)
Sampling Time	Current	14 ~ 20mA DC (Load resistance : Max 600Ω)
	Voltage (0~5V DC, 1~5V DC)	0.5 sec (Output charge period is the same)
	Thermocouple	±(0.3% + 1 digit) of process value or ±2°C, either of bigger numerical values is taken. (Ambient temperature : 23°C ±10°C) -100 to 0°C : ±3°C, -200 to 100°C : ±4°C Thermocouple B under 400°C is not regulated.
Setting and Indication Accuracy	R.T.D.	±(0.3% + 1 digit) of process value or ±0.3°C, either of bigger numerical values is taken. (Ambient temperature : 23°C ±10°C) Ambient temperature 0 to 50°C : ±(0.5% + 1 digit) or 1.5 °C, either of bigger numerical values is taken.
	Current (4~20mA DC),	±(0.3% + 1 digit) in setting limiter span (Ambient temperature : 23°C ±10°C)
	Voltage (0~5V DC, 1~5V DC)	
Memory Element		
Voltage Source		
Weight		
Power Consumption		
Accessories		
Operating Condition		
Storage Condition		
Functions	Manipulated Variable Limiter (ML1, MH1, ML2, MH2)	0.0 to 100.0%
	Setting Limiter (SLL, SLH)	See "Input and Range".
	Selectable Control Mode (CNT)	Auto-Tuning PID Type A ↔ B, Normal ↔ Reverse, Auto-Tuning PID ↔ ON/OFF
	PV Correction Setting & Point (PVS)	-199 to 999 or -199.9 to 999.9 (°C)
	PV Correction Setting Gain	0.50 to 2.00 (times)
	Input Filter	0 to 99 (sec)
	Manual Reset (PRB)	0.0 to 100.0%, -100.0 to 100.0 (heating & cooling) of proportional band.
	Timer Operation Mode (TMM)	0.00 minute to 59.59 minutes, 0.00 hour to 99.59 hours. Accuracy : ±(1.5% + 0.5 sec) of setting time.
	Decimal Point Shift (DP)	Decimal point display available (up to 999.9)
	Manual Control	Auto/Manual control can be switched by key.
	Run/Ready	Run and Ready can be switched by key.
	Blind Function	No indication available for non-required display.
	Auto-Tuning (AT) Coefficient	After AT, the computed PV band is newly to set up with another coefficient.
	FUNC Key	"Digit Shift" "AT" "RUN/READY" "Timer Start/Reset"
	Priority Display	Arbitrary parameter screens are shifted to indication of operation mode by key. (max : 9 screens)
Event Output 1 (AL1)	Lock Function (LOC1)	4 modes (OFF, ALL, Operation Lock, Lock except Operation Mode)
	Watch Dog Function	Data checked by EEPROM (Err0), A/D converter check (Err1), and Auto-Tuning check (Err2). Built-in watch dog timer.
		Function : PV contact output (8 modes), Special contact output (3 modes), additional functions (3 modes)
		Setting Range : -199.9 to 999.9 or -1999 to 9999 (°C)
		Sensitivity : 0.0 to 999.9 or 0 to 9999 (°C)
Event Output 2 (AL2)	Rating	250VAC 2.4A (Load resistance) 1a contact.
	Contact polarity	selectable either normal open or normal close.

■ Additional Functions (Option)

Event Output 1 (AL1)	Function : PV contact output (8 modes), Special contact output (3 modes), additional functions (3 modes)
Event Output 2 (AL2 or OUT2)	Setting Range : -199.9 to 999.9 or -1999 to 9999 (°C) Sensitivity : 0.0 to 999.9 or 0 to 9999 (°C) Rating : 250V AC 2.4A/Load resistance 100Ω contact. When selecting output 2 at contact output 2, the output generates on cooling side during heating/cooling. Contact polarity is selectable, either normal open or normal close.
DI	Function : SV/SV2 switchable (OFF: SV2), Auto/Manual switchable (OFF: Manual), Run/Ready switchable (OFF: Ready). Normal/Reverse switchable (OFF: Normal, Normal SV2/Reverse SV2) switchable (OFF: Normal SV2), Time Start/Reset (OFF: Counting) Input Specifications : Minimum input time : 500ms, OFF voltage : 6DC max, ON current : 6mA max, Permissible resistance value between contacts : ON 333Ω max, OFF = 500kΩ min
CT Input	Setting Range 1 to 30A/AC, Accuracy : 5% (setting resolution 1A)
Heating & Cooling	See "Control Output" in standard specifications.
Communication	RS-485 conformable : Multi-Drop 2 line system, 1:31 stations max. Communication Parameter : BBC check/Non-BBC check, 7 bits/8 bits, Non-parity/odd number/even number, stop-bit 1/2. Communication Speed : 1200/2400/4800/9600/19200 BPS Communication Address : 1 to 99 Response Delay Time : 0 to 250m sec.

■ Operation Flow

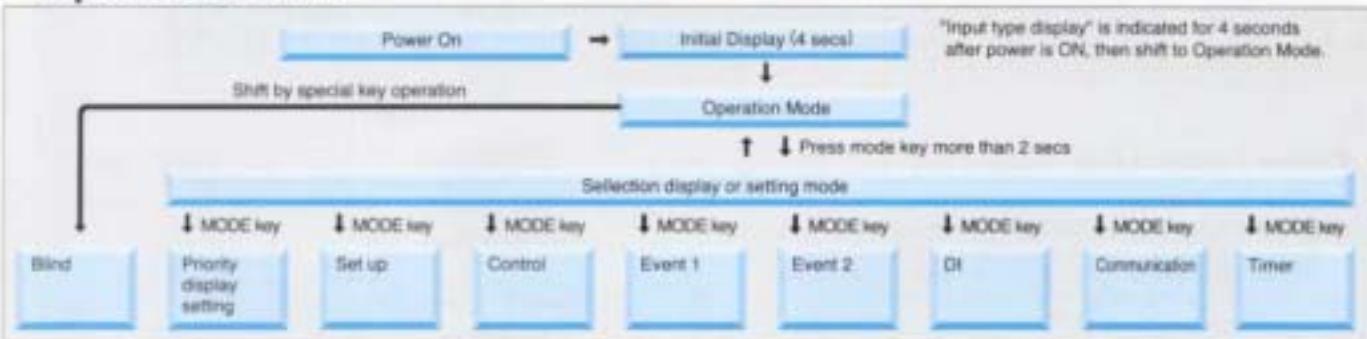

■ Input and Range (Thermocouple & R.T.D. switchable by key)

Thermocouple	Setting Range		Display Range	
	Non-decimal point	Decimal point	Non-decimal point	Decimal point
K	°C	-200 ~ 1372	-199.9 ~ 999.0	-210 ~ 1382
J	°C	-200 ~ 850	-199.9 ~ 850.0	-210 ~ 860
R	°C	0 ~ 1700	—	-10 ~ 1710
T	°C	-200 ~ 400	-199.9 ~ 400.0	-210 ~ 410
N	°C	-200 ~ 1300	-199.9 ~ 990.0	-210 ~ 1310
S	°C	0 ~ 1700	—	-10 ~ 1710
B	°C	0 ~ 1800	—	-20 ~ 1820

R.T.D.	Setting Range		Display Range	
	Non-decimal point	Decimal point	Non-decimal point	Decimal point
Pt100 (JIS/IEC)	°C	-199 ~ 500	-199.9 ~ 500.0	-199 ~ 520
JPt100 (JIS)	°C	-199 ~ 500	-199.9 ~ 500.0	-199 ~ 520

Current Voltage	Setting Range		Display Range	
	Non-decimal point	Decimal point		
0~5V	V	-1999 ~ 9999	-199.9 ~ 999.9	Approx. -10% of SV low limiter setting (SLL) ~ Approx. +10% of SV high limiter setting (SHL), within the setting range.
1~5V	V	-1999 ~ 9999	-199.9 ~ 999.9	Approx. -12% of SV low limiter setting (SLL) ~ Approx. +12% of SV high limiter setting (SHL), within the setting range.
4~20mA	mA	-1999 ~ 9999	-199.9 ~ 999.9	Approx. -12% of SV low limiter setting (SLL) ~ Approx. +12% of SV high limiter setting (SHL), within the setting range.

■ Event Contact Output Mode (Alarm)

Abnormal PV/heater code

0	None
1	Abnormal PV contact output
2	Abnormal heater contact output
3	Abnormal PV contact output + abnormal heater contact output

Only 0 or 1 available, when no selecting CT input.

Additional Functions

0	None
1	Holding
2	Awaiting sequence
3	Holding + awaiting sequence

When special function is 0, only code 0 or 1 selectable.

■ Timer Operation Mode

Start Mode

1	Auto start : ON delay
2	Manual start : ON delay
3	Event start : ON delay
4	Auto start : OFF delay
5	Manual start : OFF delay
6	Event start : OFF delay
7	SV start : OFF delay

ON delay : Control start or event output is ON, after time-up

OFF delay : Control stop or event output is OFF, after time-up

* Output is selectable, either main control output or event output.

■ Timer Drive Setting


0	Non-use timer function
1	Control output
2	Event 1 output

PV Event Code (Alarm)


0	None
1	Deviation high and low limit
2	Deviation high limit
3	Deviation low limit
4	Deviation high and low range
5	Absolute value high and low limit
6	Absolute value high limit
7	Absolute value low limit
8	Absolute value high and low range

■ Advanced Features

● Self-Tuning PID (Standard)

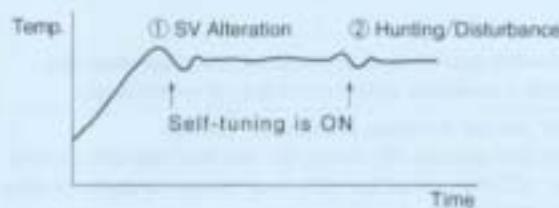

● Blind Function (Standard)

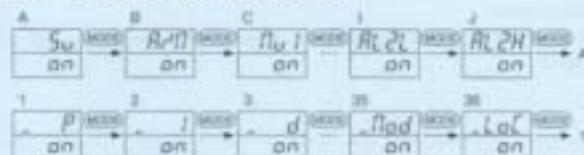


The mode screen or the parameter screen whichever you demand can be displayed by merely pressing a key, at the request. When the SV screen is erased, the set value is normally not indicated but the measured value (PV) is only shown.

● Timer Function (Standard)


1. Bread Oven Machine

- Put dough into oven and press the timer start key.
- While setting timer, temperature in oven is controlled by heater.
- After timer counts up, control of oven is stopped automatically. (This example is for control stop after the timer counts up.)

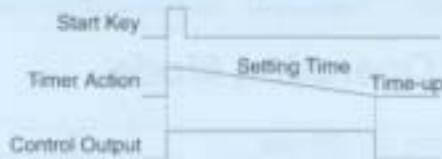


2. Package Machine and Industry Machinery

- (In case of start of control after the relative equipments are prepared)
- When power is "ON", the timer starts to count.
 - While setting timer, control output is stopped.
 - After the timer counts up, control is started automatically. (For control start after the timer counts up.)

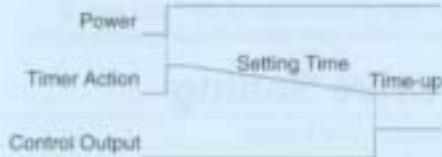

● Automatic/Manual Control (Standard)


Automatic/Manual control can be switched by front key for DI or communication. When checking the manipulation action for valve and heater during a system test run, or when normal control is not operational due to sensor failure, the system can be operated manually in this mode.

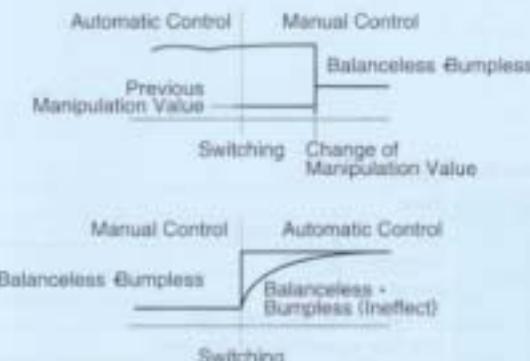

● Communication Function (Option)


● Connection to Personal Computer

TTM-000 controllers can observe concentrically by personal computer, as connection diagram instructed below.

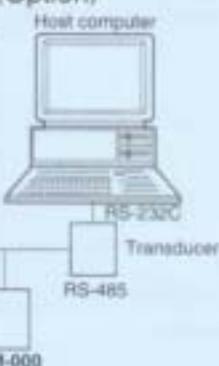

● Digital PV Filter (Standard)


This is a function to realize a CR filter effect on software by means of primary delay arithmetic on the measured value (PV). The filter effect can be set by time constant (t). (The time constant is a period to reach 63% of PV value, when the input changes stepwise.)

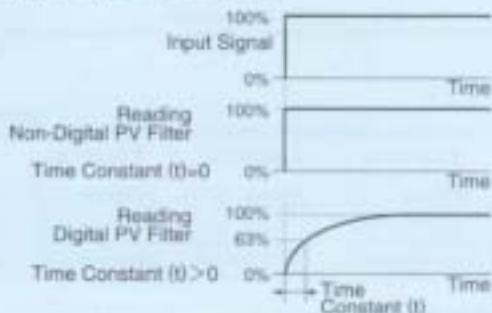

Digital PV filter with the following uses:


- To eliminate high frequency noise. When electric noise is added to the input, the adverse effect is reduced.
- When input changes abruptly, the response delay is possibly made.

● Over-Shoot Protection PID (Standard)

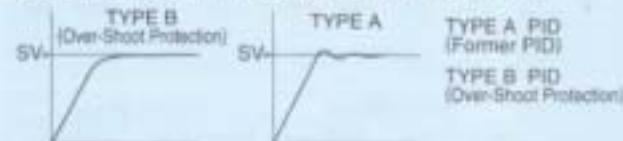

● Sifting OFF Position in ON-OFF Control (Standard)


When the shift value is set to 0(zero), the OFF position is the set value position.

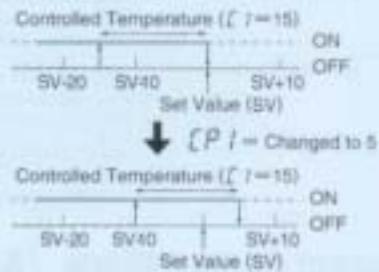


When the OFF position setting is shifted by +5, ON/OFF position shifts to that of +5 minutes upper than the original position, though the set value is not changed. When the OFF position setting is shifted toward the minus direction, the OFF position shifts in the reverse direction.

● Heating/Cooling PID Control (Option)

Low Cost Type

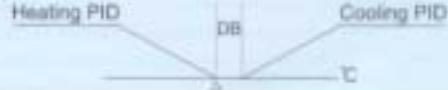

■ Ordering Information

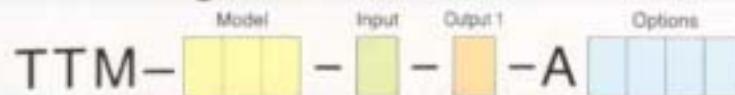

*1 Input is selectable either thermocouple (K, J, R, T, N, S, B) or R.T.D. (Pt100, JPt100), with front key.

*2 "A(EV1 : Alarm 1)" provided for in the standard specifications.


*3 You may select a maximum of 3 options for TTM-002/004, 4 options for TTM-005/006/007/009.

Model	002	24X48mm				
	004	48X48mm				
	005	96X48mm				
	006	48X96mm				
	007	72X72mm				
	009	96X96mm				
Input	Ni	Thermocouple (K, J, T, R, N, S, Bi), R.T.D. (Pt100, JPt100)				
	2	4-20mA DC, 0-5V DC, 1-5V DC				
Output 1	R	Relay contact				
	P	SSR drive voltage 12 VDC				
Options	I	Current 4 ~ 20mA				
	B	Output 2, Relay contact or EV2				
	P	Output 2, SSR drive voltage				
	R	EV2, Relay contact: TTM-002/004: Not optional TTM-005/006/007/009: Not available when DI is selected.				
	D	CT Input, Not provided when EV1 is not selected. Not provided when I is selected for Output1. TTM-002/004: Not provided when DI is selected.				
	E	DI(Digital Input) TTM-002/004: Not usable when CI is selected. TTM-005/006/007/009: Not obtained when EV2 is selected.				
	M	Communication RS-485				


Please refer to this table for appropriate specifications when placing order.

■ Wiring


TTM-002 when making DI with open collector output, terminal # 11 needs to be "+ (plus)"

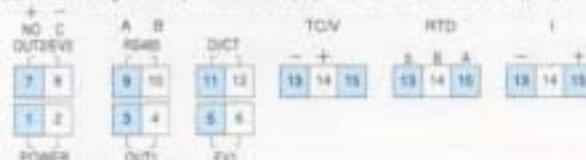


TTM-004 when making DI with open collector output, terminal # 9 needs to be "+ (plus)"

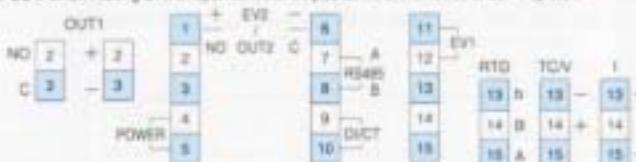

TTM-005/006/009 when making DI with open collector output, terminal # 11 needs to be "+ (plus)"

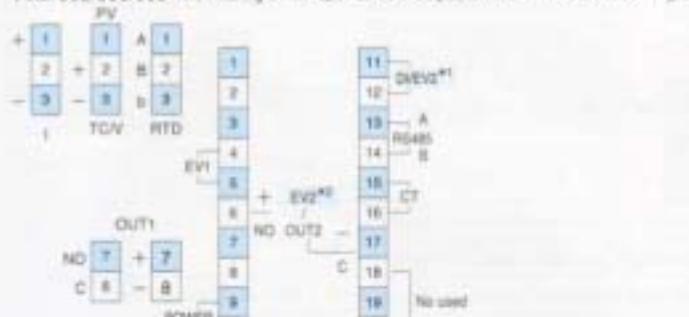

TTM-007 when making DI with open collector output, terminal # 8 needs to be "+ (plus)"

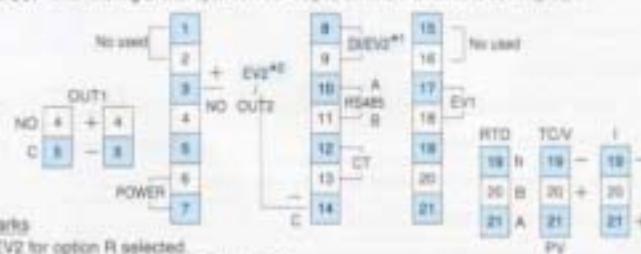

Remarks

*1: EV2 for option R selected

*2: EV2 for option of either B or R selected

■ Terminals

DI	No 9 + side
Communication	Connect T/R (A) and T/R (B) (Use transducer, except RS-485 in use)
Relay Output	C : Common, NO : Normal open
SSR Drive Output	Connect directly to + & - input of SSR
EV 1, 2	Changeable normal open & normal close
CT	Connect specific current transformer (CT)
R.T.D. Input	Connect to A, B and b
Thermocouple Input	Connect to polarity (+, -)

* When OUT 2 is "P", connect directly + & - on input of SSR side.

■ Dimensions

● TTM-002 ■ European terminal AWG less than 18 (Upper side)
AWG less than 16 (Lower side)



● TTM-004, 005, 006, 007, 009



Model	a	b	c	d	A	B	C	D
TTM-002	45.2	29.7	3.5	96.5	45	24	3.5	96.5
TTM-004	45.2	45.2	3.5	77	45	48	6	77
TTM-005	45.2	52.2	3.5	76.5	45	48	6.5	76.5
TTM-006	52.2	45.2	48	76.5	120	48	6.5	76.5
TTM-007	52.2	68.2	3.5	77	120	72	6.5	77
TTM-009	57.2	62.2	3.5	77	120	96	9	77

For installation of multiple units, L = (A+d) × N-3/2. For TTM-002 is L = (A+B+C+D) × N-3/2.

When you use compressed lead wire to install multiple units, please be careful sufficiently not to touch the other lead wires.



Bristol Babcock Controls (NZ) Ltd

Auckland New Zealand

Tel: +64-9-299 7646 Fax: +64-9-299 7643

email: info@bbcnz.co.nz www.bbcnz.co.nz



Proudly Supplied by